




03 FFL Ph01 - Existing
Scale = 1 : 50

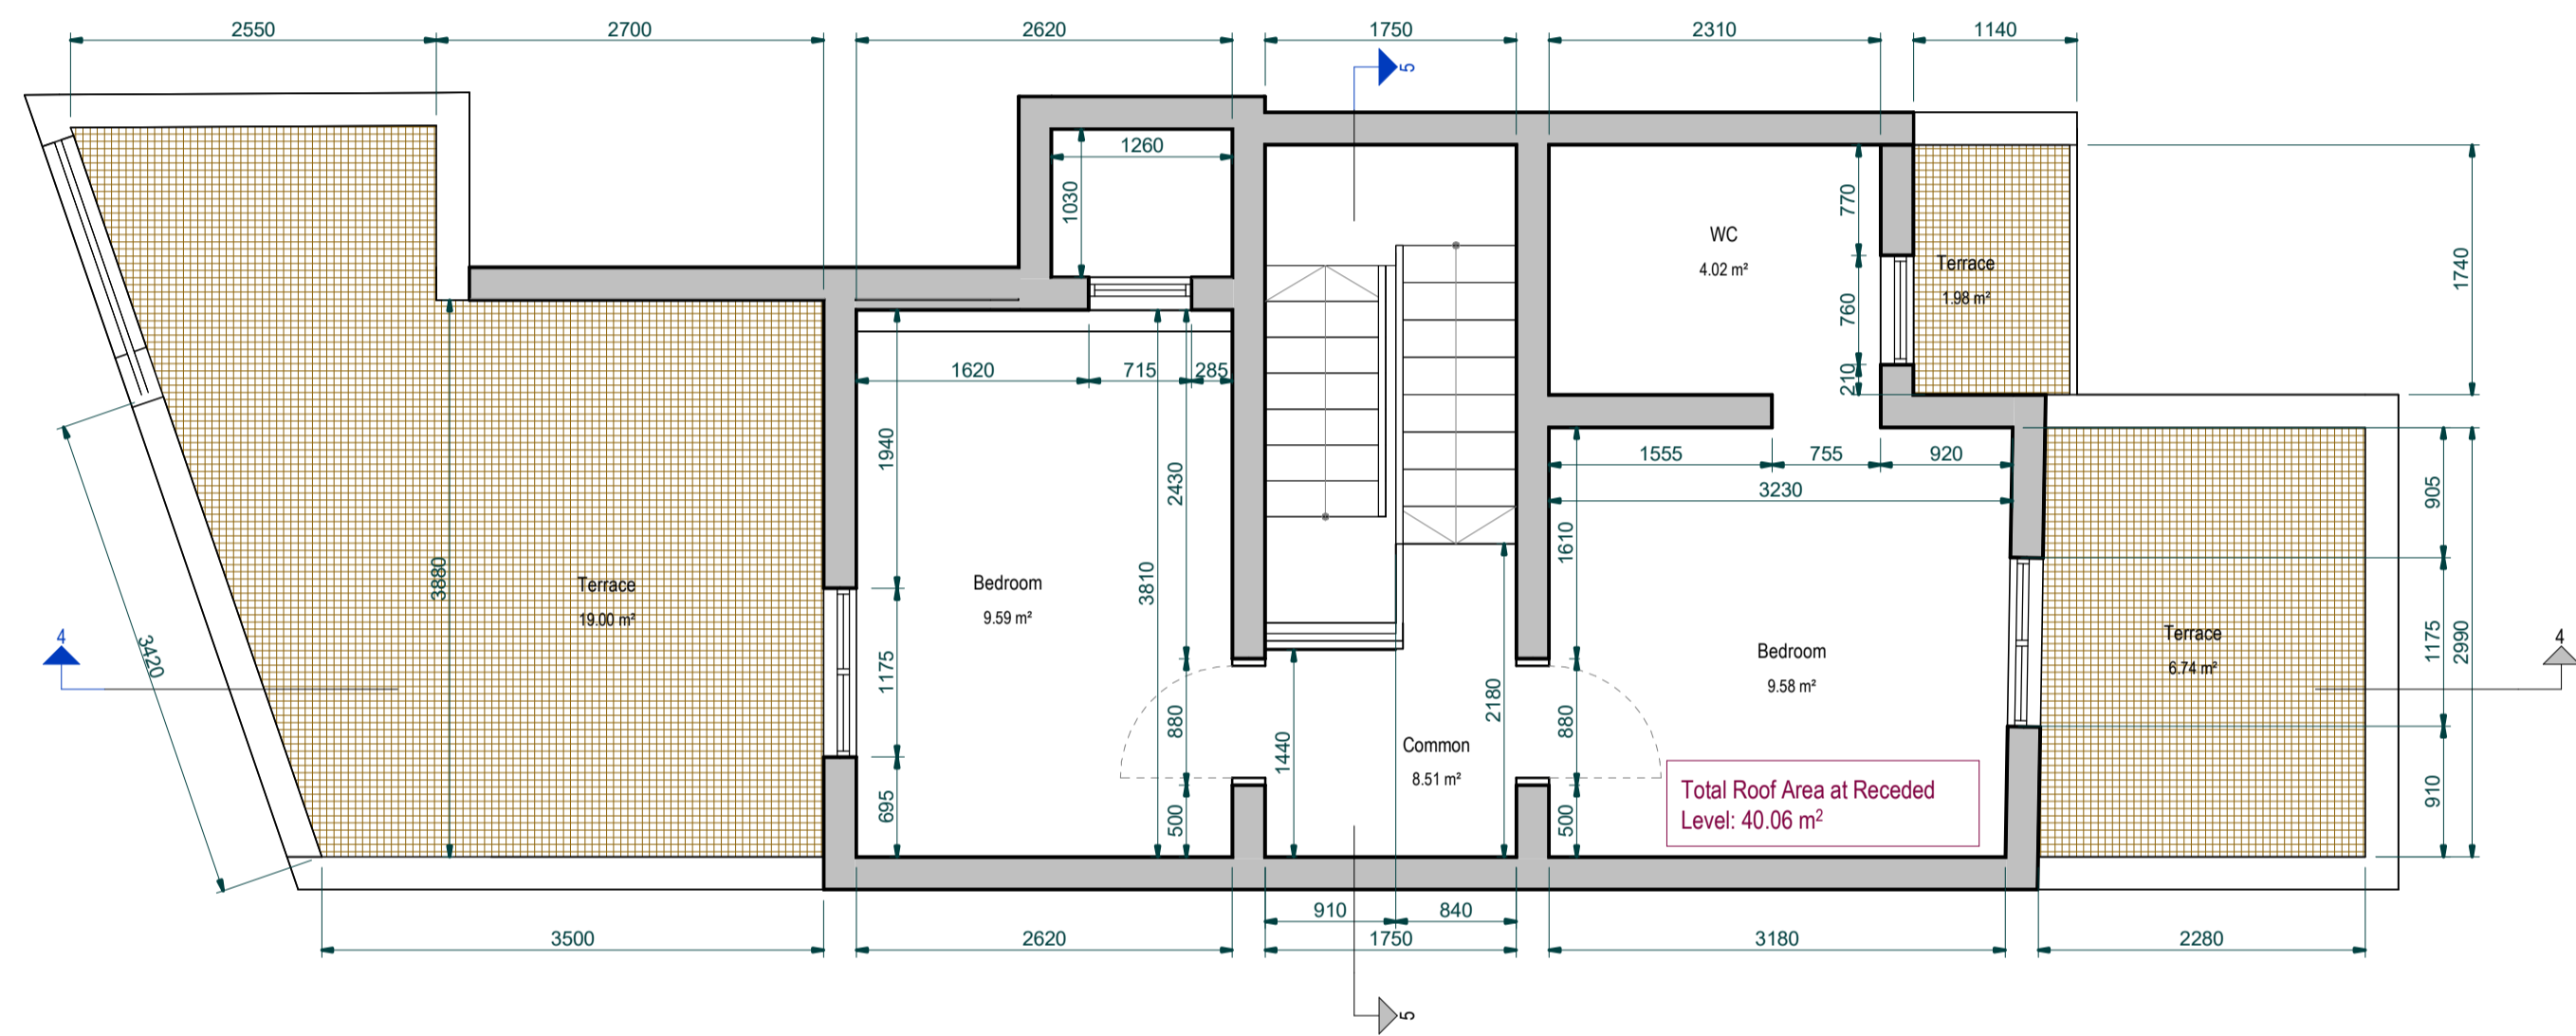


04 FFL Ph01 - Existing
Scale = 1 : 50

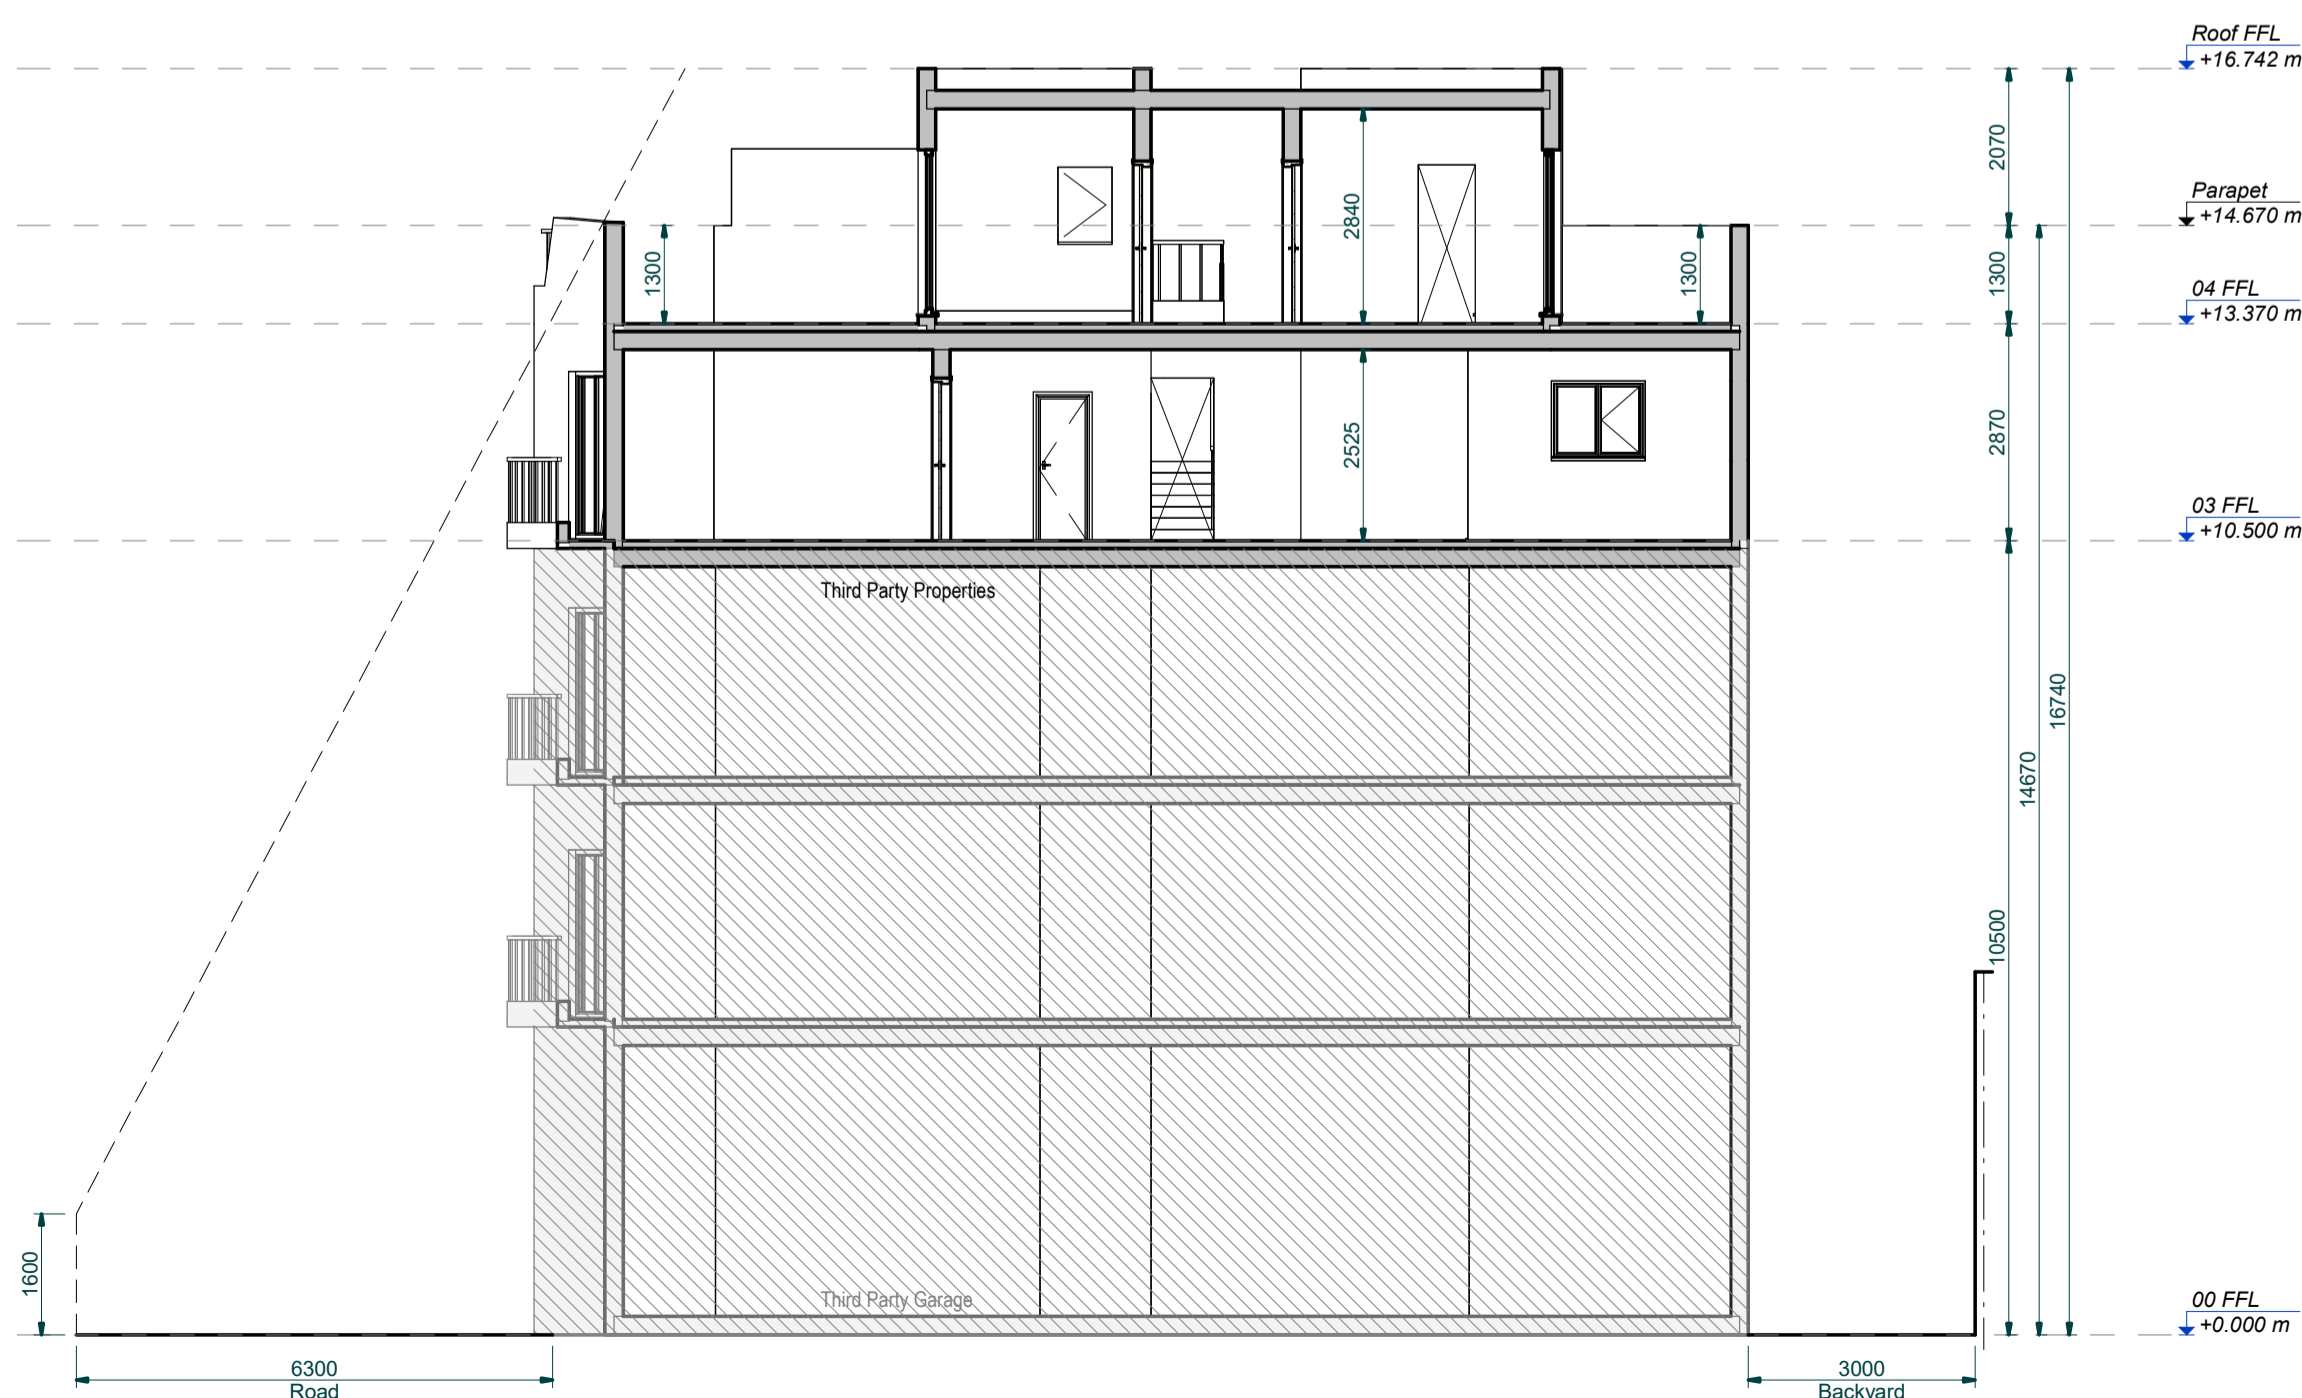

Longitudinal Section
Scale = 1 : 100

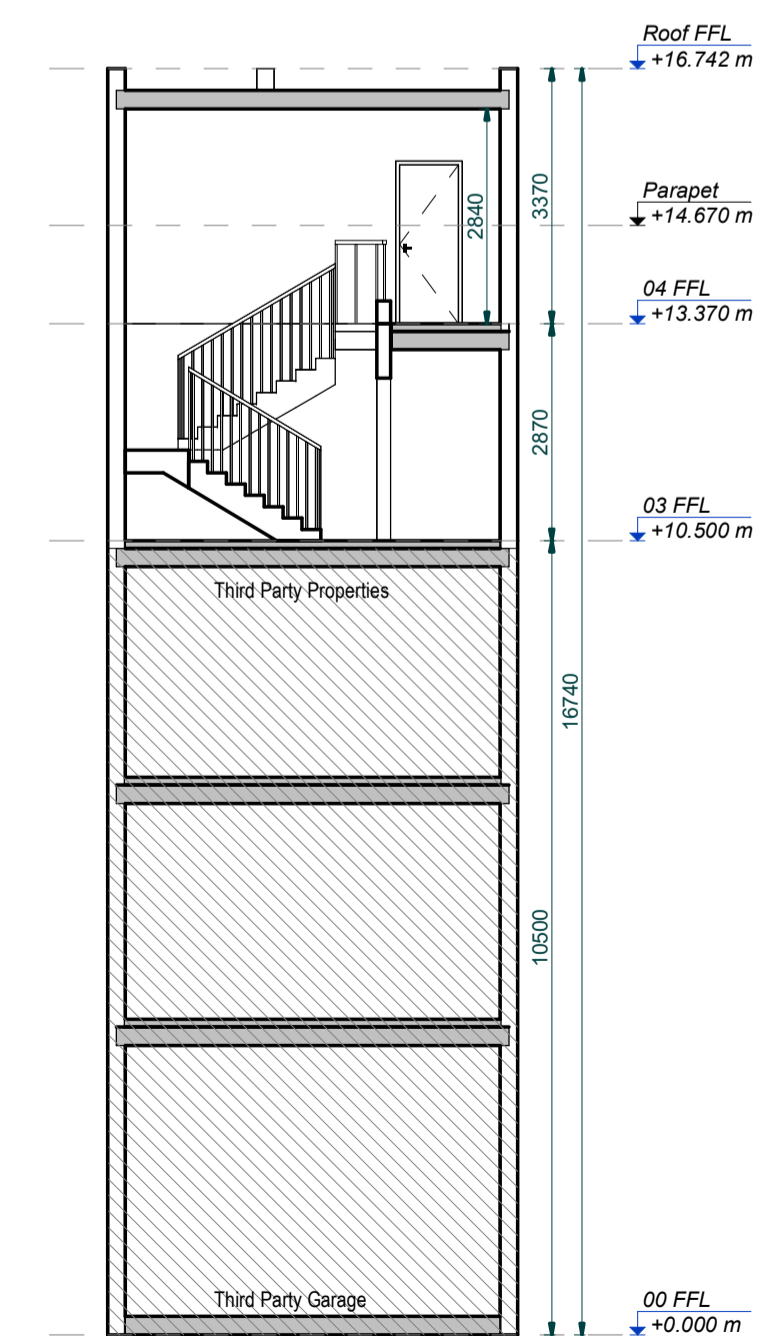

Cross Section
Scale = 1 : 100

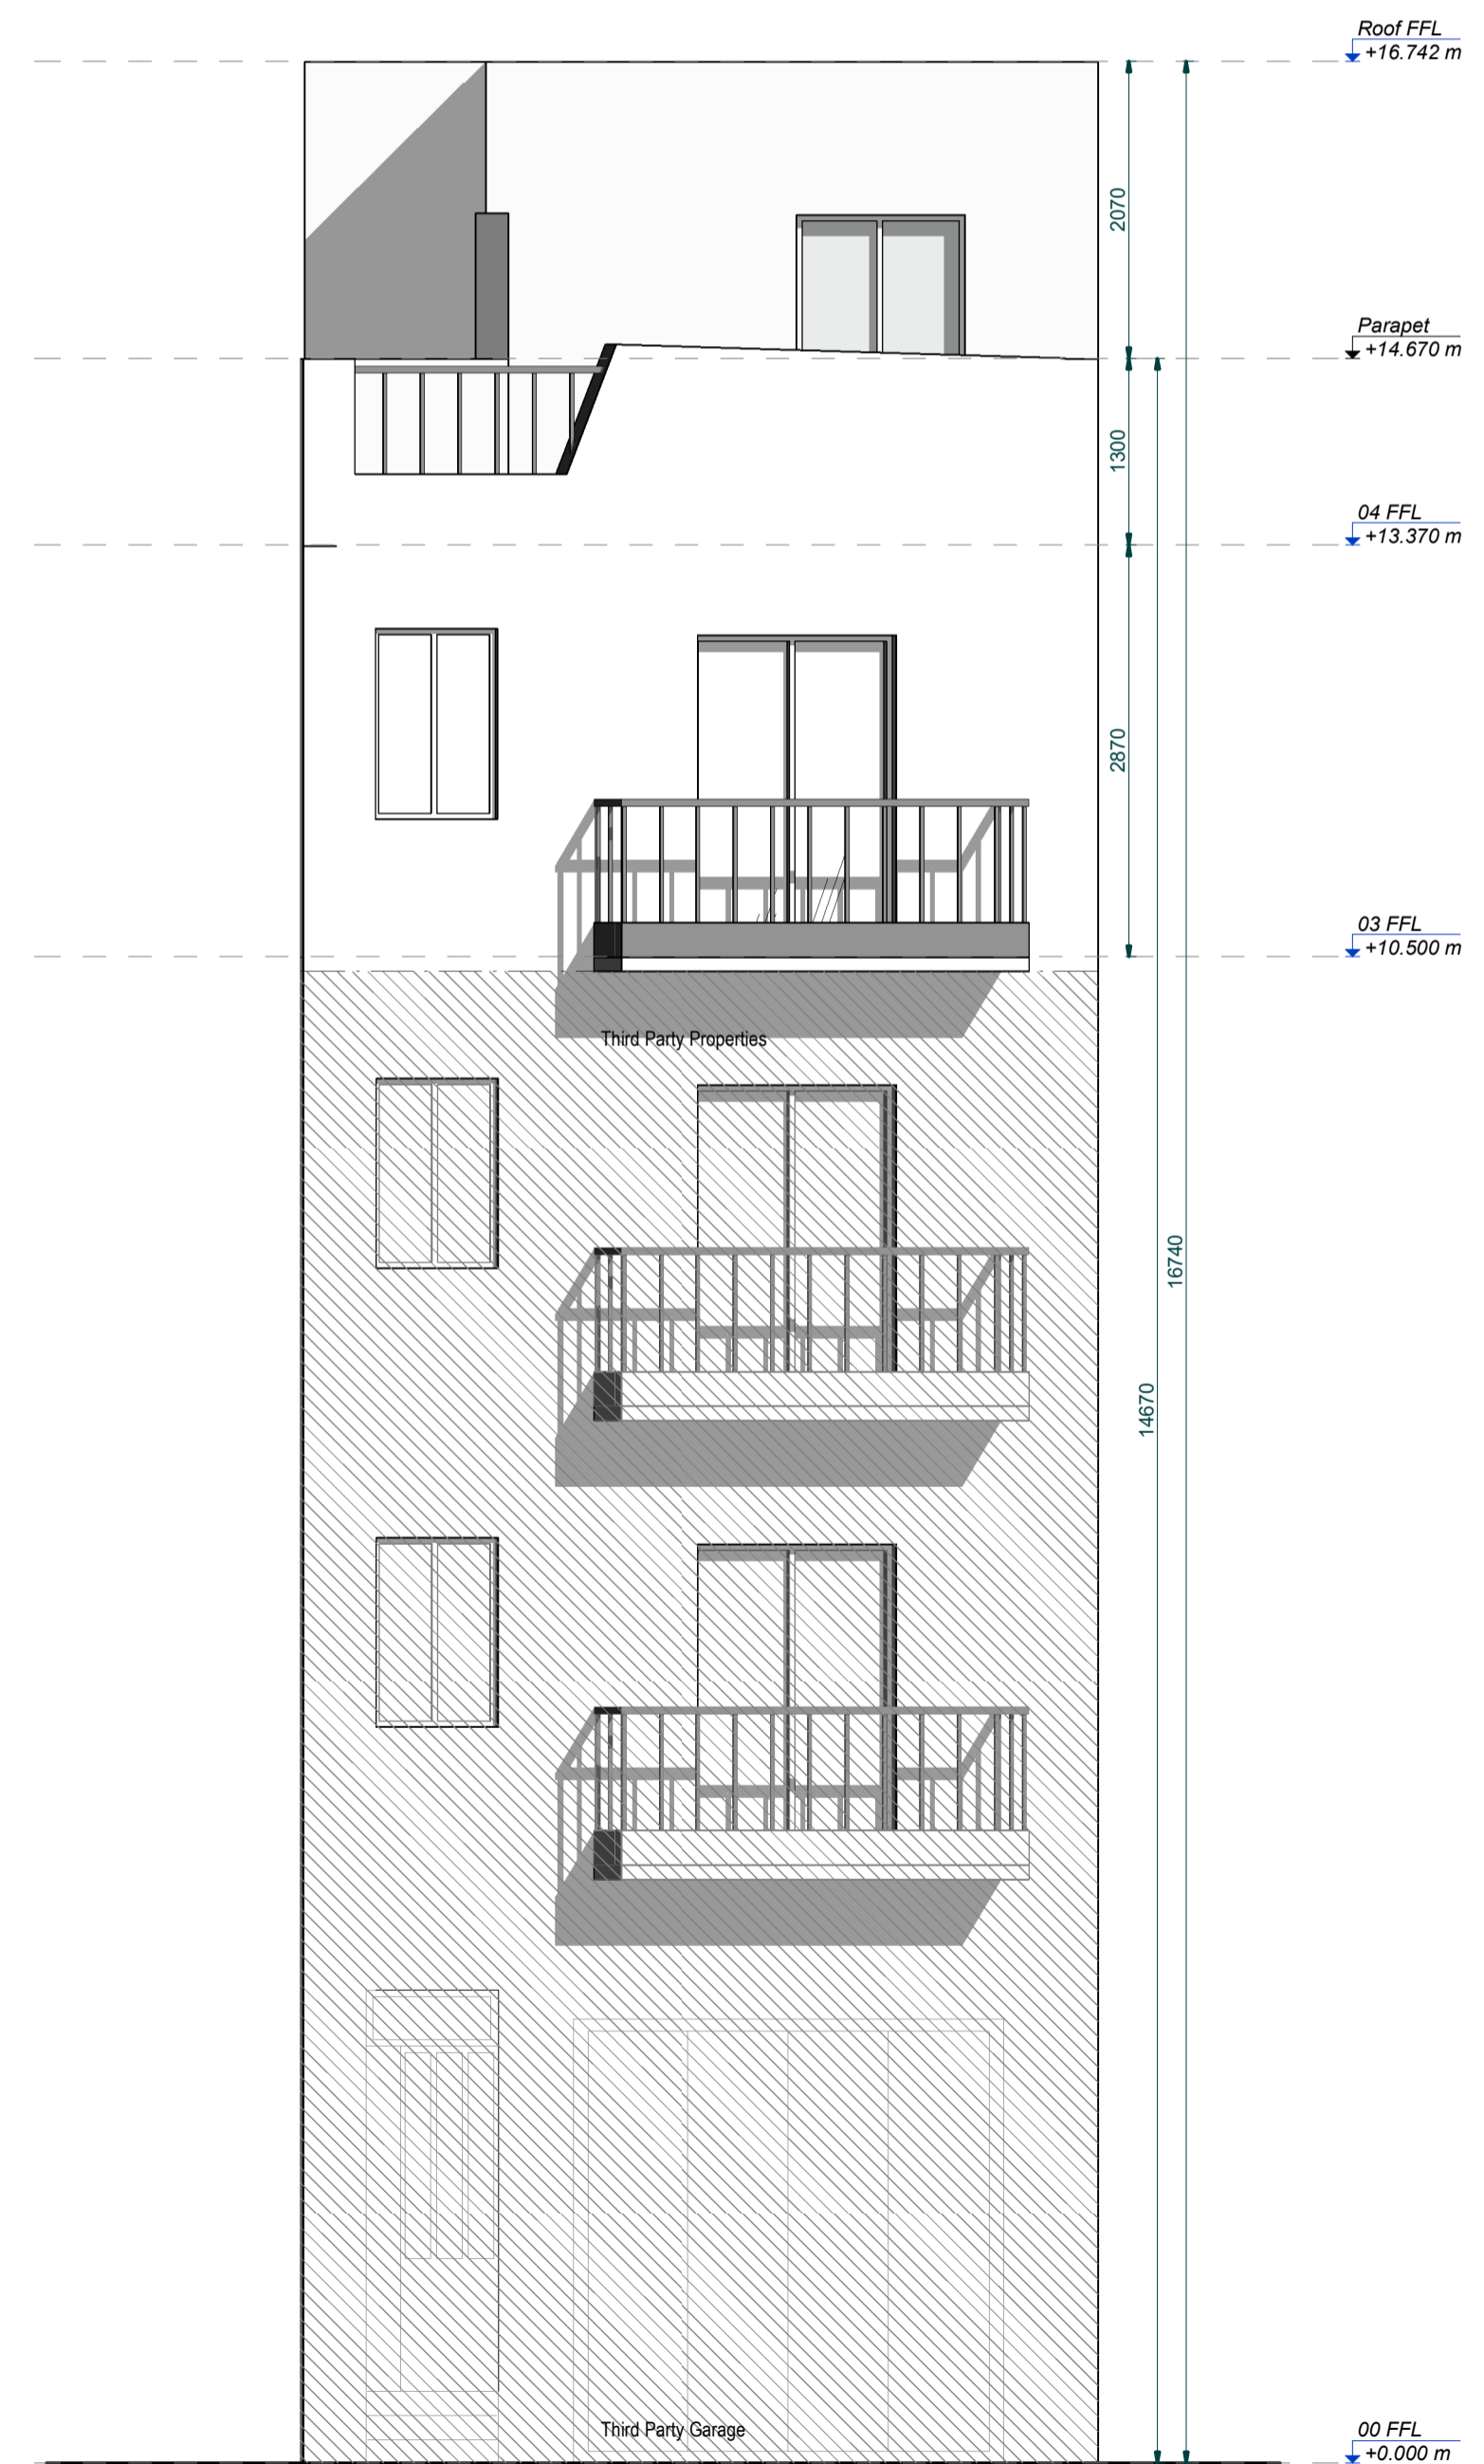

Elevation
Scale = 1 : 50